


Please include this form with your old cover.

Bow

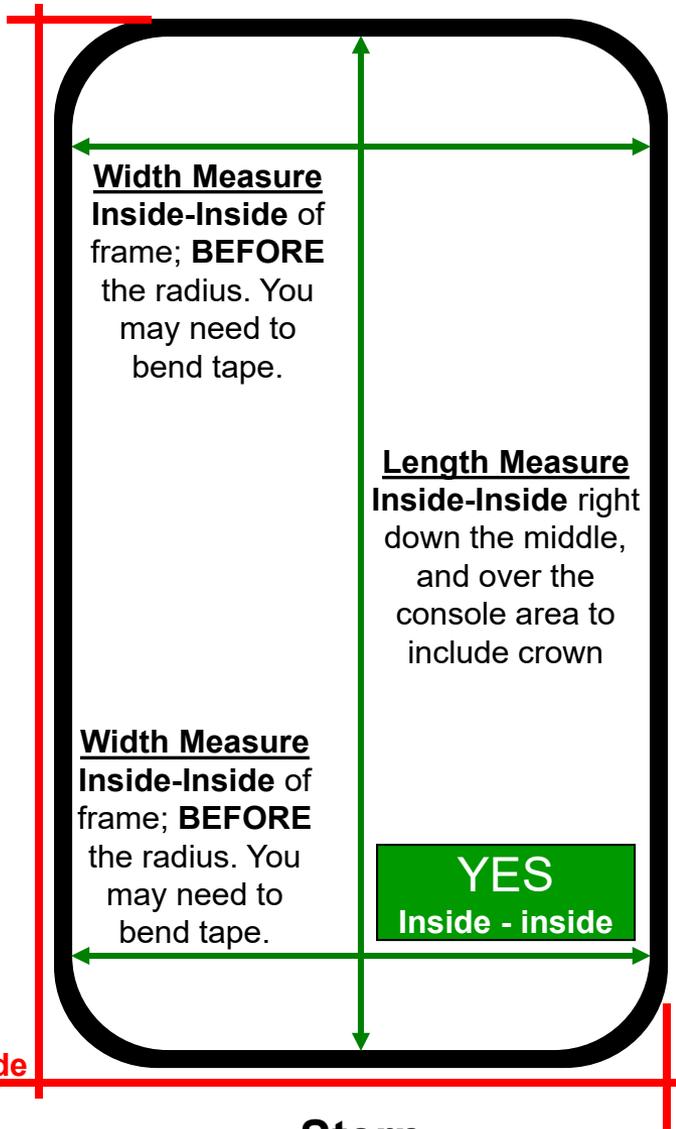

Width Measure
Inside-Inside of
frame; **BEFORE**
the radius. You
may need to
bend tape.

Length Measure
Inside-Inside right
down the middle,
and over the
console area to
include crown

Width Measure
Inside-Inside of
frame; **BEFORE**
the radius. You
may need to
bend tape.

YES
Inside - inside

Spreader Lights ?
mark them

NOTE:

All measurements should be taken
inside-inside of FRAME, not old canvas.

Side-side measurements:

Just reach up and measure inside-
inside of frame; both front and back as
shown green arrows. You may need to
bend your tape to include the crown.

Length measurement:

Should be taken with tape resting **over**
topside of console area to include
crowning, yet still inside-inside of
frame, right down the middle.

If canvas is still on the frame, please
mark with Sharpie (**from underside**)
EVERYTHING welded to the hoop;
support bars, rocket launchers,
spreader lights, tubing, etc. **REASON;**
to avoid for grommet placement,
Especially if they are outside of frame
because they could offset lacing.
(anything that touches the frame, even
outside grab bar weld points).

Marks only need to be 2-3" long.



Rocket Launchers ? mark them

Color

Frame (A,B,C,D,E,F)

Width (Front)

Width (Aft)

Length

Phone #

Email address



BEFORE REMOVING YOUR OLD T-TOP COVER

- **Marking**

From the underside of your old T-Top Cover, take a Sharpie, or grease pencil, and make a 2" – 3" mark on each side of your support bars, rocket launchers, spreader lights, outside grab rails, and everything that is welded to the hoop. These are areas we do not want to put a grommet because it will shift your lacing, whether they be on the **inside, outside, top or bottom of your framework**. Sometimes we will put the grommets back in the same place, but most times we see evidence where they should have been placed differently.



RULE OF THUMB: If you were to take your finger and thumb, and wrap it around the hoop you will be lacing to, then try to slide them around the entire hoop, and something stops you, whether it is on the **inside, outside, top, or bottom**. **MARK IT** We don't want a grommet there.

- **Measuring**

We must measure **INSIDE to INSIDE of the FRAMEWORK** because that is the size of the canvas once it is made up. Outside measurements are no good to us.

When measuring width / side-side, just reach up and measure inside-inside before the corner at both front and back. You may need to bend your tape to include the crown.

When measuring length, measurement should be taken with tape resting **over topside console area** to include crowning, yet still inside-inside of frame, right down the middle.

We take pride in our work to give you bragging rights too. We pay attention to detail, where others don't always. If we are going to make you a new T-Top Cover, let's do it right and not duplicate any mistakes. We see them come into the shop in all ways, shapes, and forms, and try our best to give you the best fit we can. We know it's scary to order anything custom over the Internet and expect 100% satisfaction, and that is why we go the extra mile.

Thanks for trusting our abilities. We appreciate it and will do a good job for you !!